

Place of Use

Authorized Place of Use is within the Service Area of the City of Walla Walla, Washington (not mapped). Water enters distribution system at point shown on map (above).

--- Conveyance

Water is conveyed from Authorized POD to place of use via 30-inch diameter steel pipeline (buried) about 14.5 miles long.


Flowmeter

Discharge is measured with two flowmeters installed in series upstream and downstream of hydroelectric facility.

Point of Diversion

Gravity diversion located in NE/4 of NW/4 of Section 22 at a distance 470 feet S and 200 ft W from N/4 Corner of Section 22. Intake is located in pool immediately upstream of dam. Vertical plate fish screen is located at same location, immediately upstream of gravity intake.

The purpose of this map is to identify the location of a water right. It is not intended to provide information regarding the location of property ownership boundary lines.

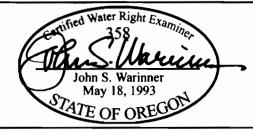

FOUNTAINHEAD 1204 Alvarado Terrace Walla Walla, WA 99362 509.529.2646 phone

Application S-84679 Permit S-54483

in the name of CITY OF WALLA WALLA

Revised 03 FEB 2009

